

Kaweco
GERMANY, SINCE 1883.



 
HOW TO REFILL, CHANGE & USE

FOUNTAIN PENS

 WATCH VIDEO


POCKET SIZE

- 1 Screw the fountain pen open.
- 2 Insert standard ink cartridge.

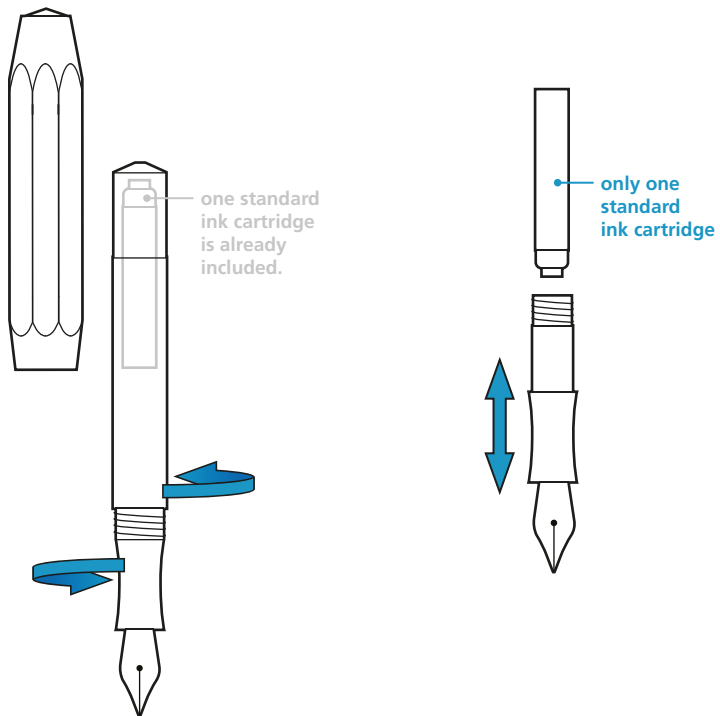

STANDARD SIZE

 
- 1 Screw the fountain pen open.
- 2 Insert standard ink cartridge.

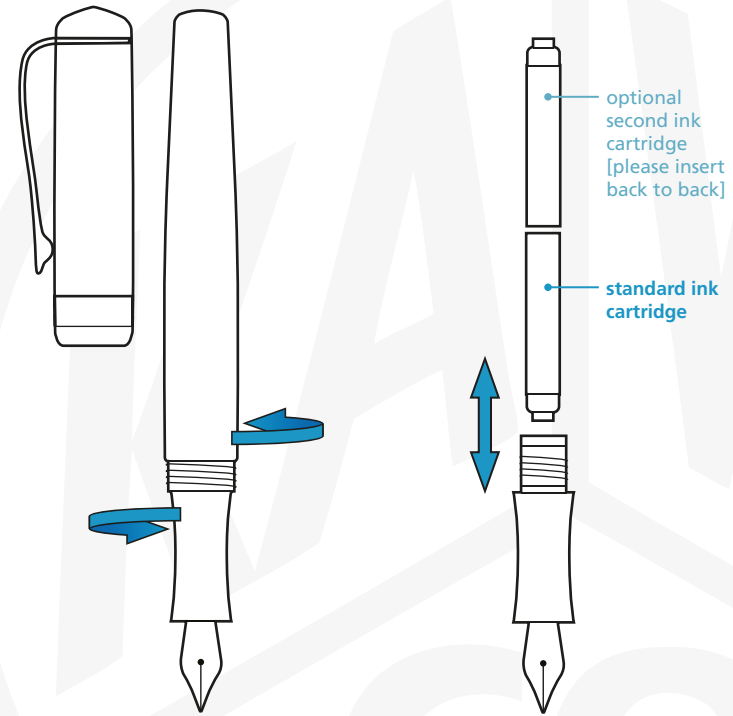


ROLLERBALL PENS

POCKET SIZE

 1 Screw the rollerball pen open.

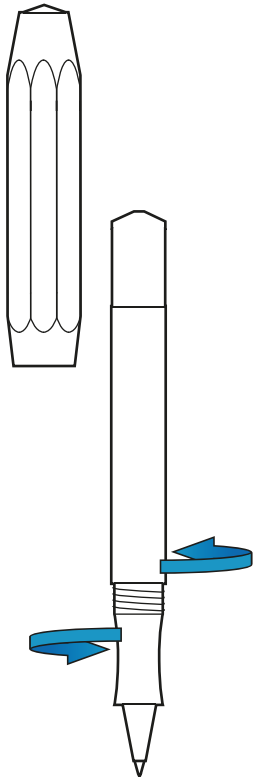


 
2 Remove old refill and insert new standard G2 refill. Please make sure to put the spring in front of the refill.

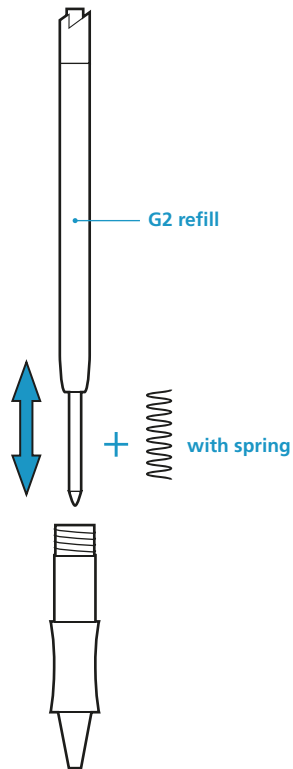

STANDARD SIZE

1 Screw the Rollerball Pen open.

  2 Remove old refill and insert standard Euro refill.


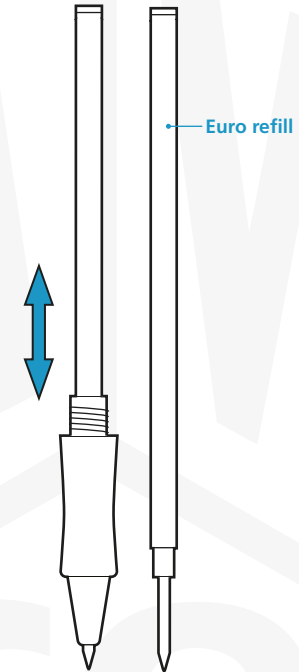
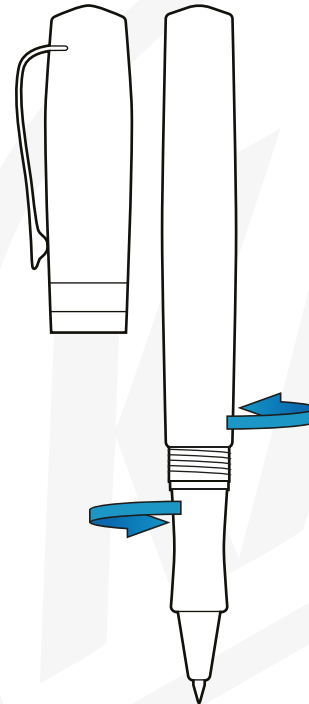


BALLPOINT PENS

 WATCH VIDEO



POCKET SIZE

   - 1 Screw the ballpoint pen open.
- 2 Remove the old refill and insert the new one.
- 3 Screw in mechanism.

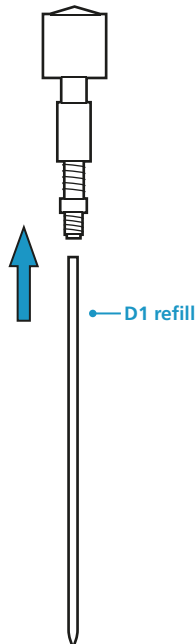

STANDARD SIZE

  - 1 Screw the ballpoint pen open.
- 2 Remove the old refill and insert the new one.

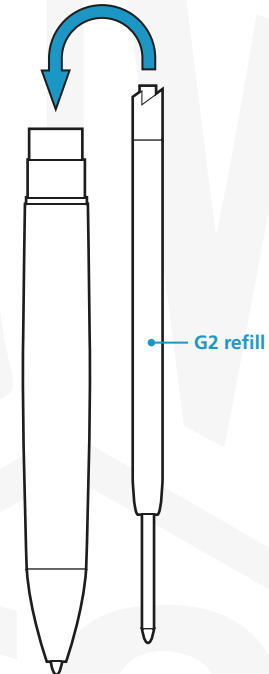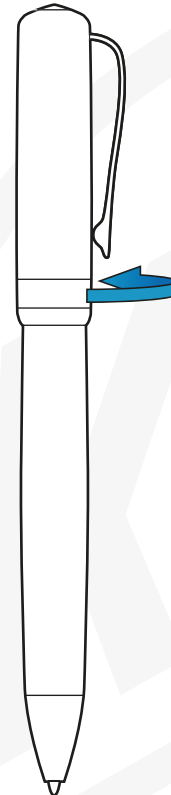


PUSH PENCILS


 WATCH VIDEO

POCKET SIZE

 1a Remove the push button and eraser [in case of 0.5, 0.7 & 0.9] of the Special S Push Pencil. Insert new lead.

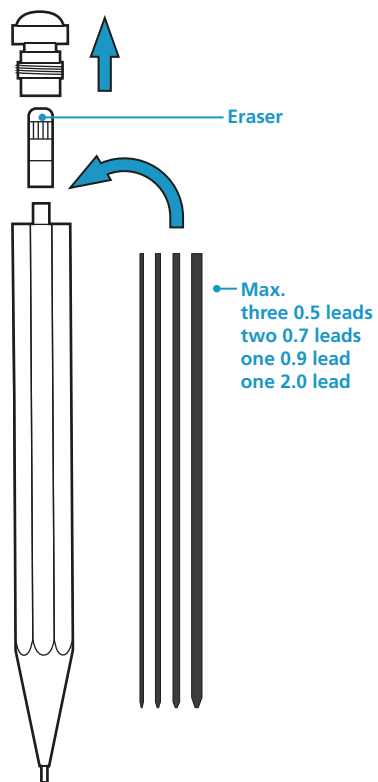


 1b Remove the push button of the push pencil. Insert new lead.

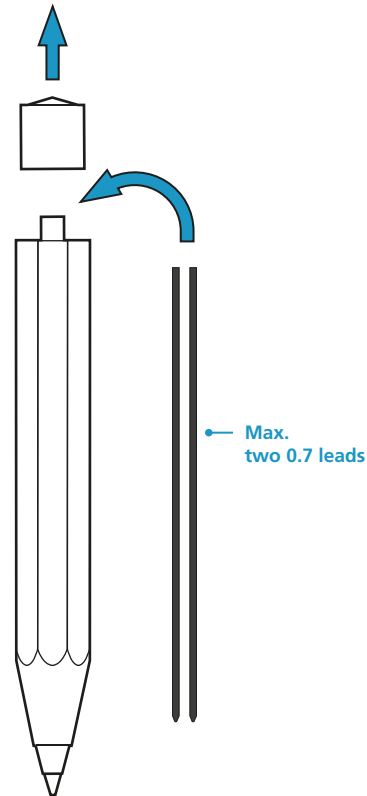


STANDARD SIZE

 1 Remove the push button and the eraser of the push pencil.




2 Insert new lead.

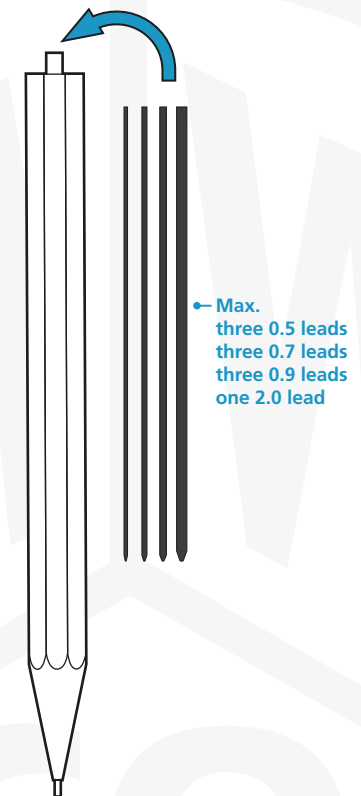 

CLUTCH PENCILS


POCKET SIZE

 - 1 Push the push button of the clutch pencil.



Do NOT remove the push button, product will be unusable.

 
- 2 Insert new lead.

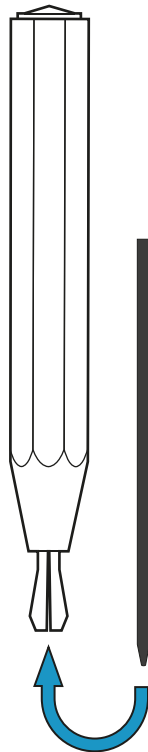

 WATCH VIDEO

SKETCH UP

 
- 1 Push the push button of the clutch pencil.



- 2 Insert new lead.



 
- 3 To sharpen the lead, please remove it, screw out the push button and use its inside as sharpener.

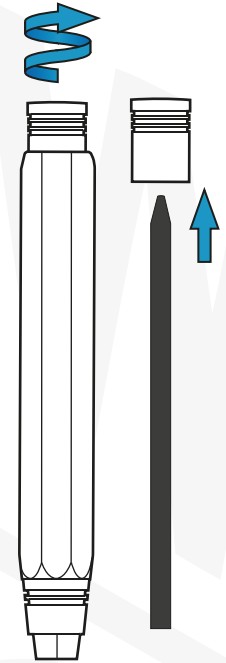


MULTIFUNCTION & TWIST

MULTIFUNCTION

 1 Screw the multifunction pen open.

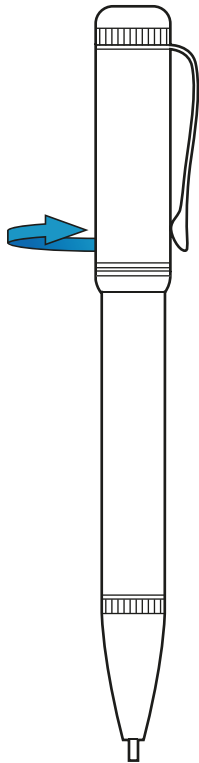


 2 Remove the old refill / lead and insert new refill / lead.

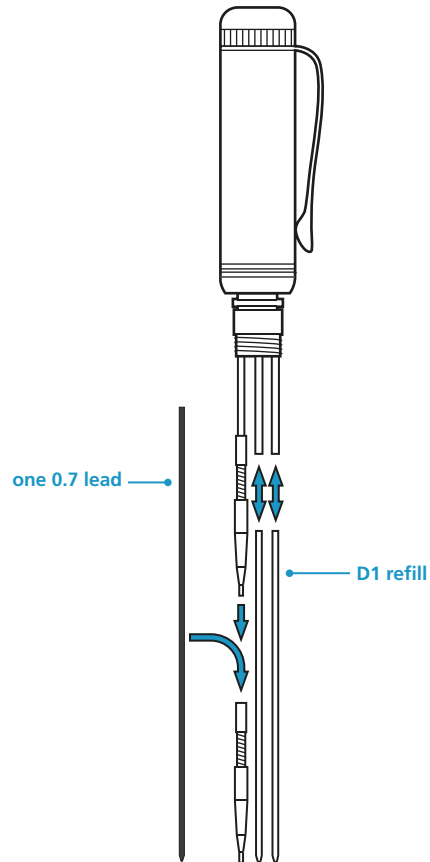


TWIST PENCIL

 1 Unscrew the cap.

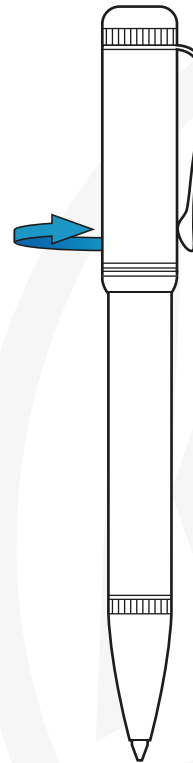


2 Insert new lead.

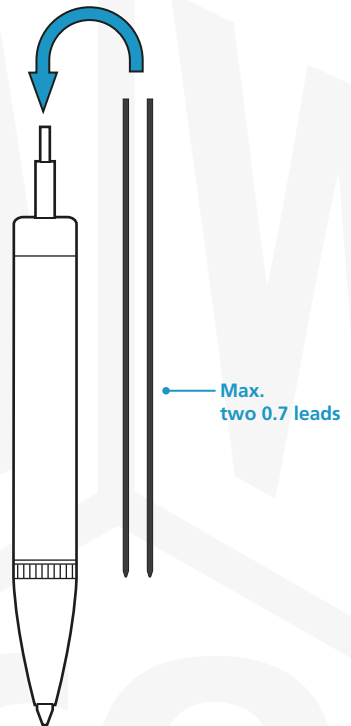 


STANDARD CONVERTER

 1 Screw the fountain pen open.

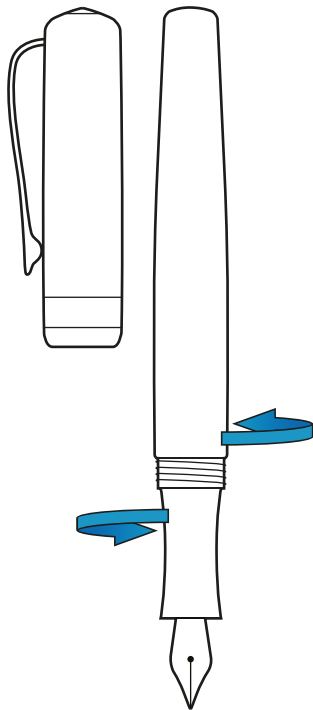


2 Insert the Kaweco Standard Converter.

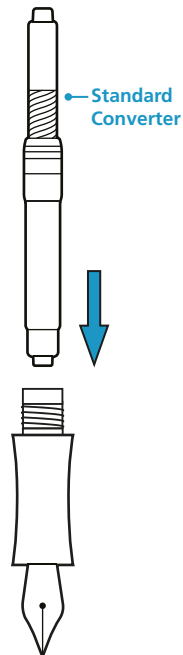 


3a Turn upper part of converter counterclockwise until new inner stick is down. Dip the entire nib and feed into the ink. Turn the upper part of the converter clockwise to fill while holding the lower part, keep the nib submerged.

 To clean the nib, please use a soft paper towel.

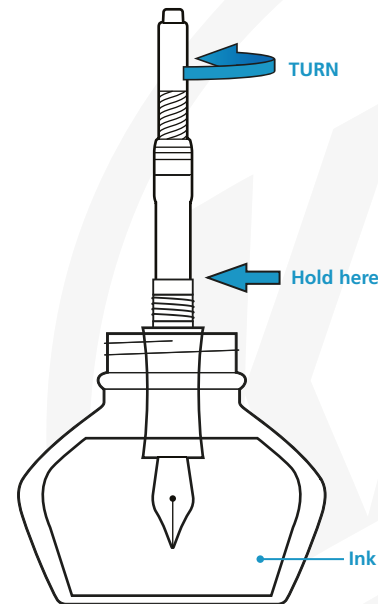


 3b To keep the front piece of a transparent fountain pen clean, we recommend to fill the Standard Converter separately. Dip the front of the Standard Converter into the ink. Pull the upper part of the Converter upwards. Keep the front submerged while slowly filling the Converter with ink. Insert the Standard Converter into the transparent fountain pen.

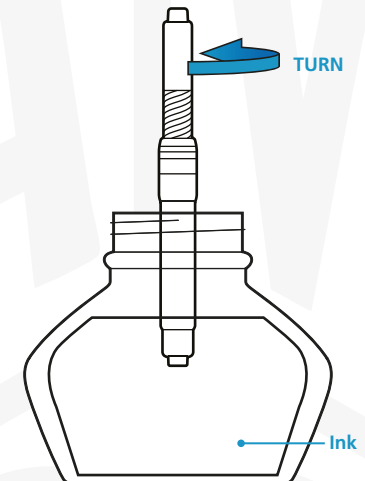


MINI CONVERTER (FOR SPORT)

1 Screw the fountain pen open.

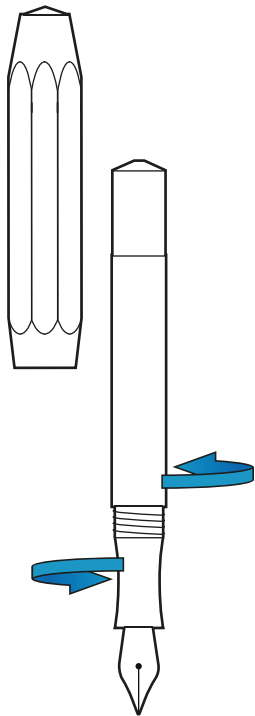


2 Insert the Kaweco Mini Converter.

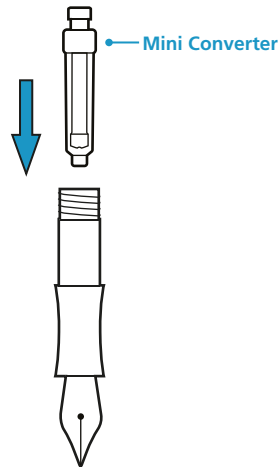 


3a Dip the entire nib and feed into the ink. Pull the knurled end of the Mini Converter. To fill while holding the lower part, keep the nib submerged.

To clean the nib, please wipe with a soft paper towel.

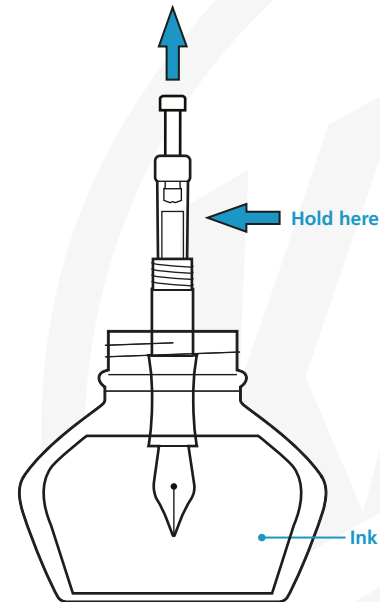

 
3b To keep the front piece of a transparent fountain pen clean, we recommend to fill the Mini Converter separately. Dip the front of the Mini Converter into the ink. Pull the knurled end upwards. Keep the front submerged while slowly filling the Converter with ink. Insert the Mini Converter into the transparent fountain pen.

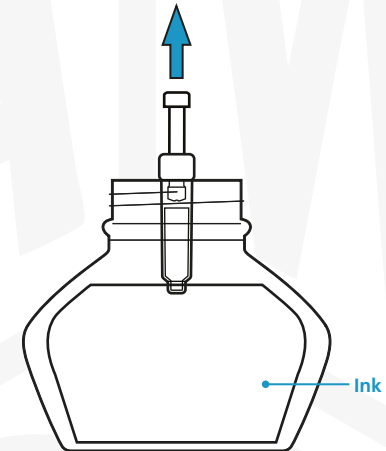


SQUEEZE CONVERTER (FOR LILIPUT)

 WATCH VIDEO

 1 Screw the fountain pen open.

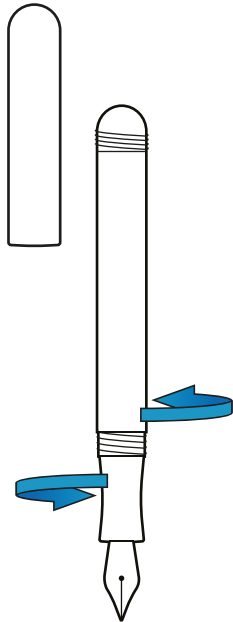


2 Insert the Kaweco Squeeze Converter.

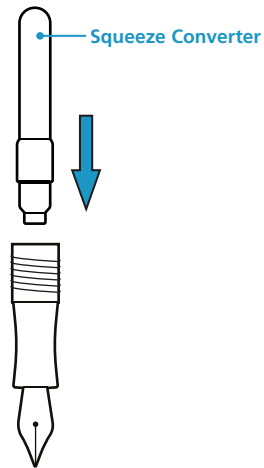 


3a Dip the entire nib and feed into the ink. Squeeze the Converter and release again while keeping the nib submerged. Repeat three to four times. Please wait a few seconds in between the squeezes and after you are finished.

 To clean the nib, please use a soft paper towel.

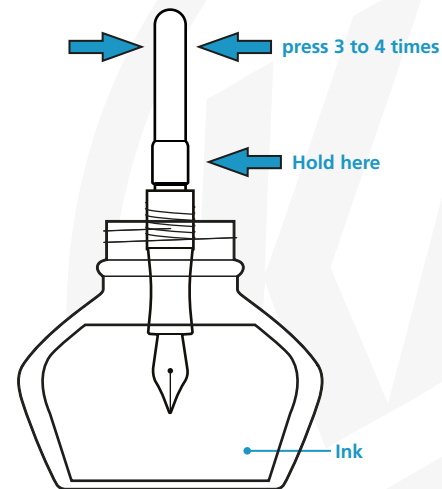


 3b To keep the front piece of a transparent fountain pen clean, we recommend to fill the Squeeze Converter separately. Dip the front of the Squeeze Converter into the ink. Squeeze 3 to 4 times to fill the Converter with ink while keeping the front submerged. Insert the Squeeze Converter into the transparent fountain pen.

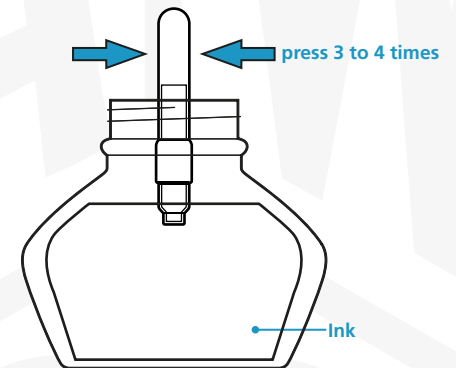

MAINTENANCE (RAW MATERIAL)

 ! Please note, that the raw material used in our writing instruments made out of metal is untreated and may develop blemishes and other impurities especially around the thread, if they come in contact with oils, silicon and grease. To reduce wear and tear of any sort, please keep sensitive parts of your writing instrument clean and dry.



raw material:

**Sterling Sport,
STEEL Sport,
BRASS Sport,
AL Sport,
Liliput
Supra
Special Brass**



Oils, silicon and grease may cause damage. Keep liquids away from sensitive parts, especially the thread.