 


PISTON FILLER

 
 WATCH VIDEO

SPORT SIZE


- 1** Unscrew cap as well as cap of the piston filler fountain pen. Turn the upper part counterclockwise until the piston stops.

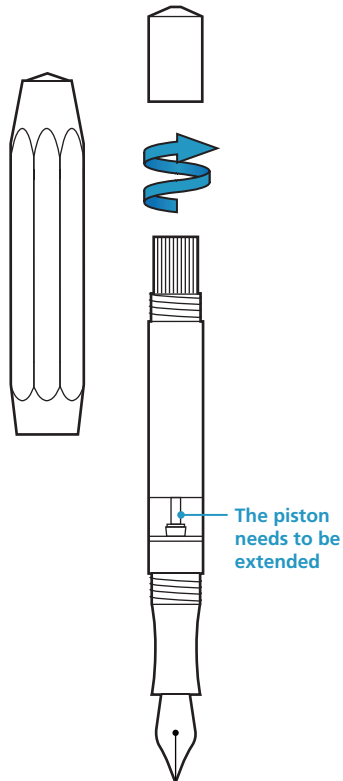


- 2** Submerge the nib into ink. It needs to be entirely submerged. Then turn the upper part clockwise to suck ink into the ink chamber.

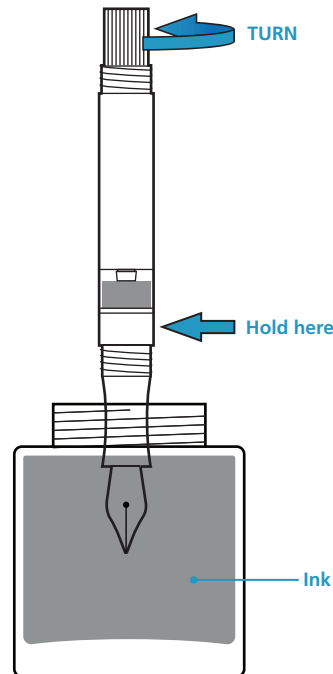

 - 3** Allow four drops of ink to drip back into the ink bottle by turning the upper part counterclockwise.

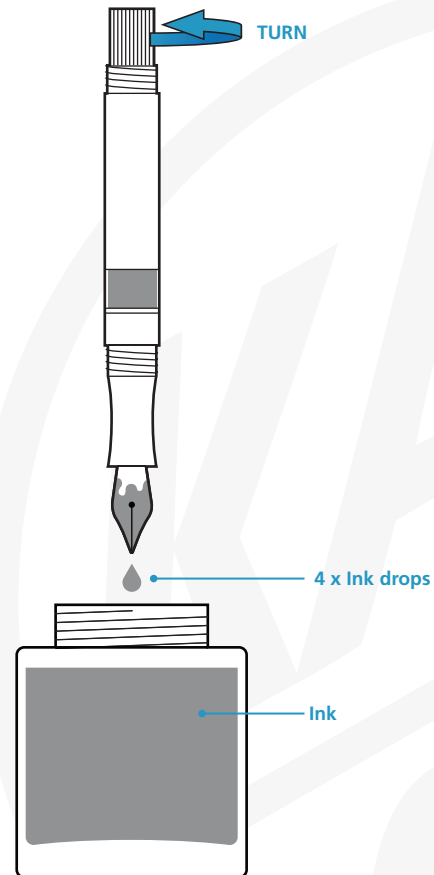

 - 4** Turn the pen upside down so the nib points upwards, and turn the piston back. Now, you can clean the nib and the front part with a paper towel. Remount the caps.

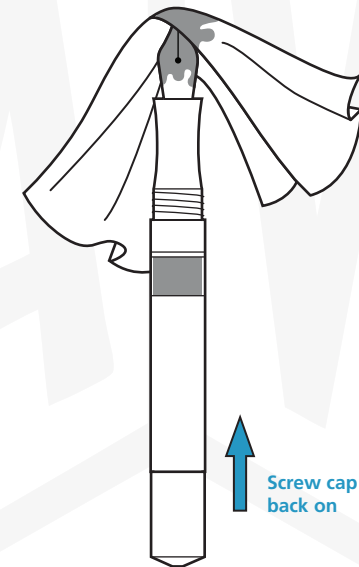


FOUNTAIN PENS

 WATCH VIDEO


SPORT SIZE

 - 1 Screw the fountain pen open.
- 2 Insert standard ink cartridge.

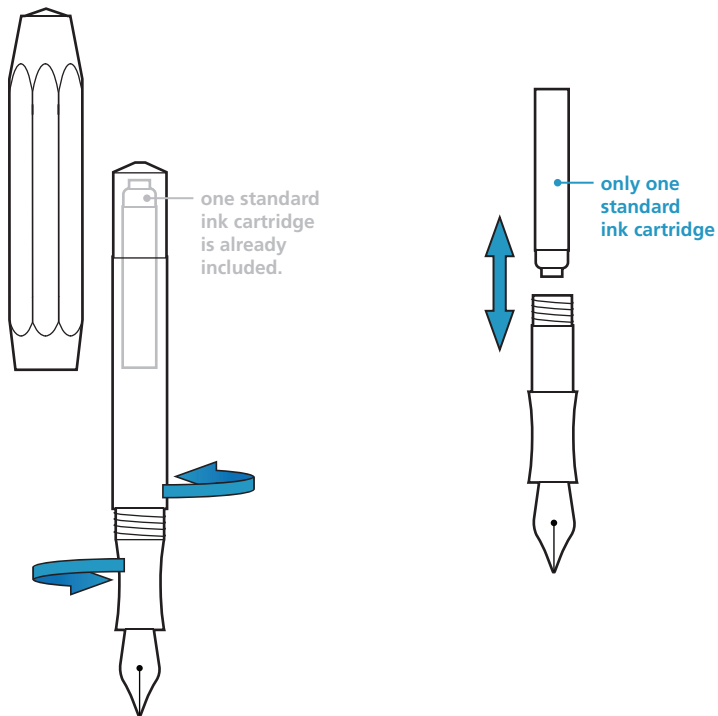

STANDARD SIZE

 
- 1 Screw the fountain pen open.
- 2 Insert standard ink cartridge.

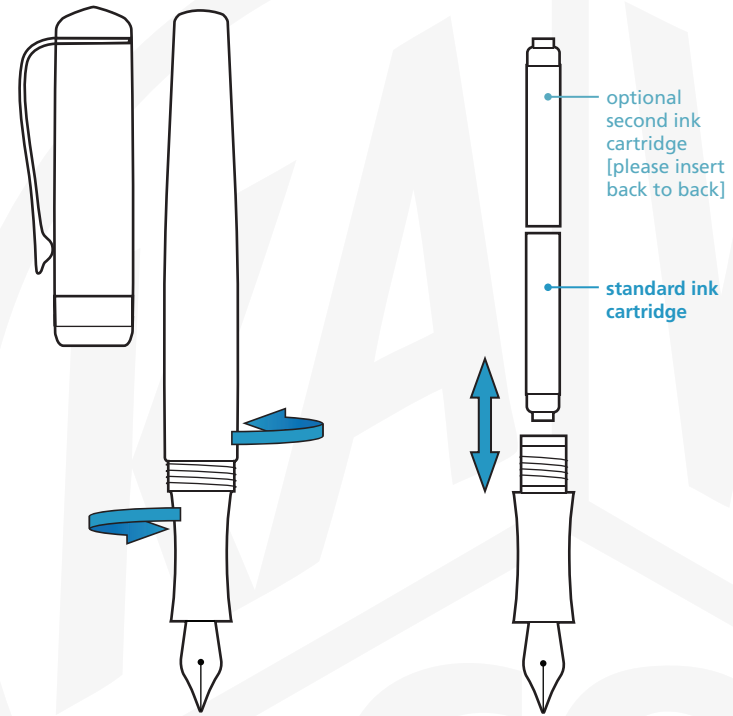


ROLLERBALL PENS

SPORT SIZE

 1 Screw the rollerball pen open.

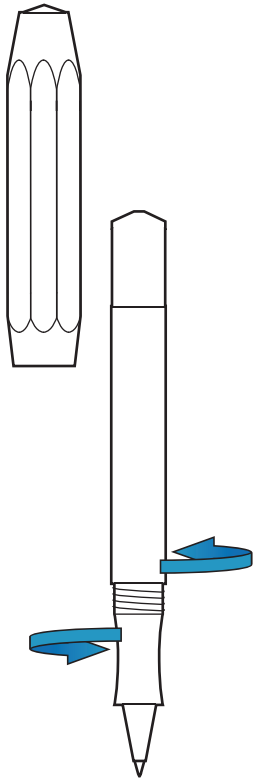


 2 Remove old refill and insert a new standard G2 refill. Please make sure to put the spring at the front of the refill.

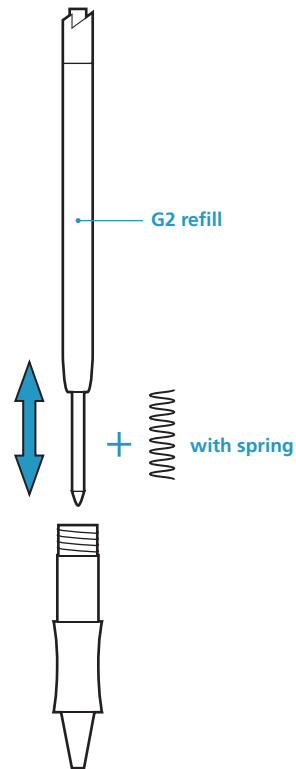


STANDARD SIZE

 1 Screw the rollerball pen open.

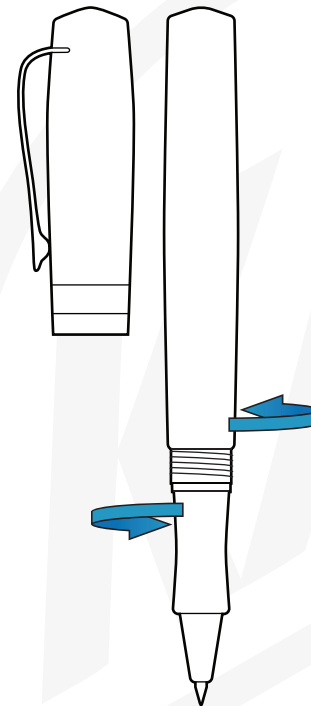

 2 Remove old refill and insert standard Euro refill.



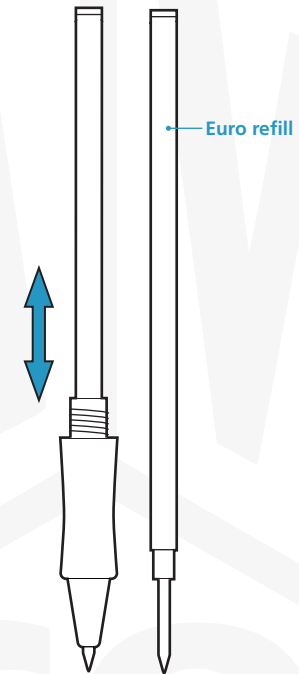


BALL PENS

 WATCH VIDEO



SPORT SIZE

   - 1 Screw the ball pen open.
- 2 Remove the old refill and insert a new D1 refill.
- 3 Screw in mechanism.

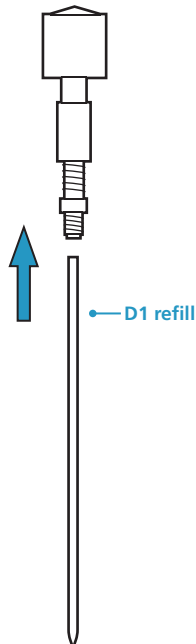

STANDARD SIZE

  - 1 Screw the ball pen open.
- 2 Remove the old refill and insert a new G2 refill.

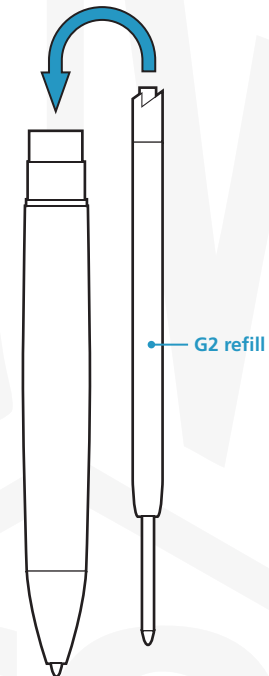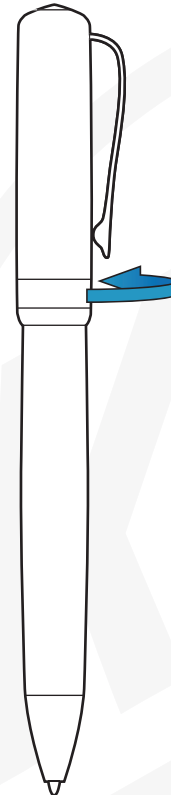


MECHANICAL PENCILS


 WATCH VIDEO

SPORT SIZE

 1a Remove the push button and eraser [in case of 0.5, 0.7 & 0.9] of the Special S mechanical pencil. Insert new lead.

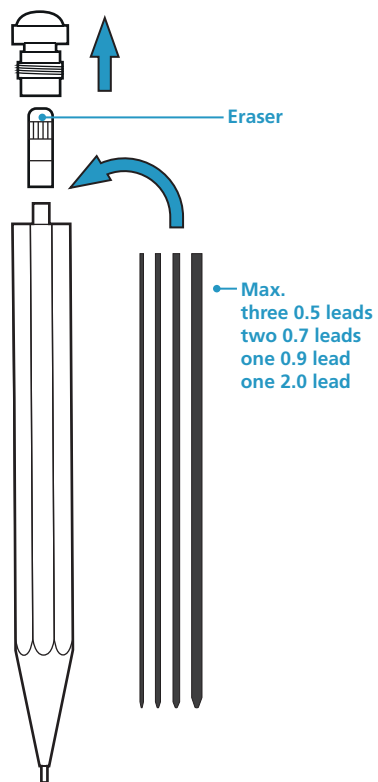

 
1b Remove the push button of the mechanical pencil. Insert new lead.

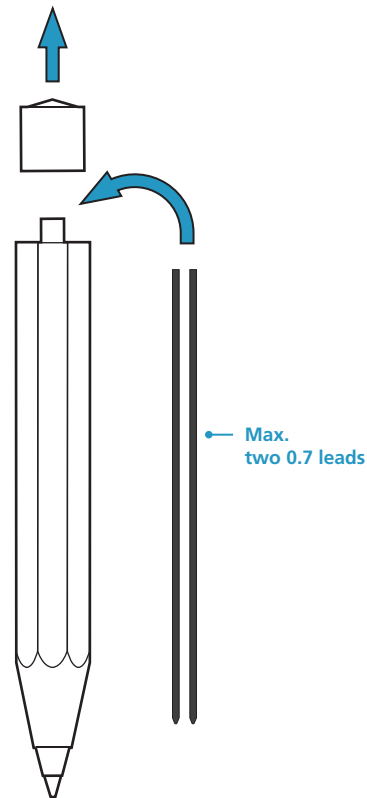

STANDARD SIZE

1 Remove the push button and the eraser of the mechanical pencil.

 
2 Insert new lead.

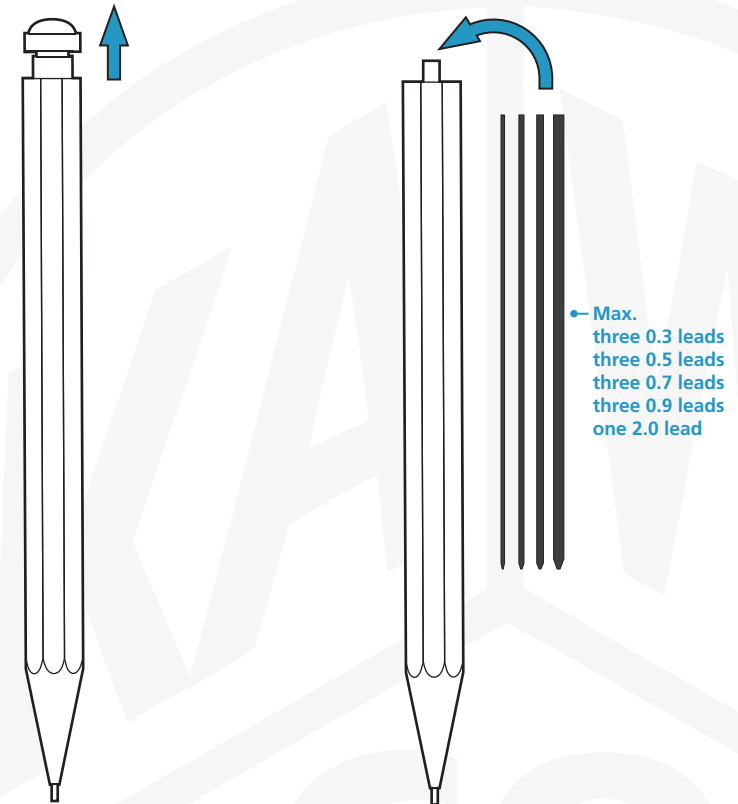


CLUTCH PENCILS

SPORT SIZE

 - 1** Push the button of the clutch pencil.

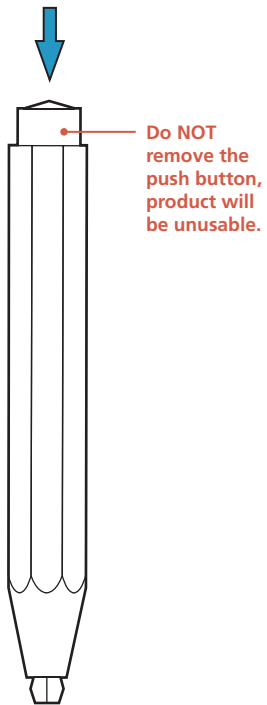


- 2** Insert new lead.

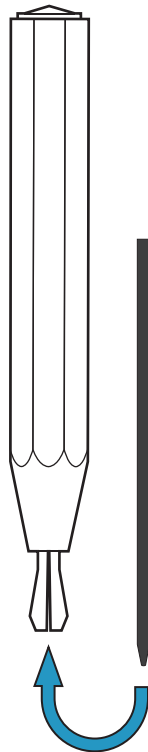 


 WATCH VIDEO

SKETCH UP

 
- 1** Push the button of the clutch pencil.



- 2** Insert new lead.

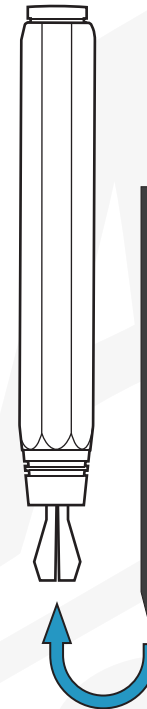 

 
- 3** To sharpen the lead, please remove it, screw out the push button and use its inside as sharpener.

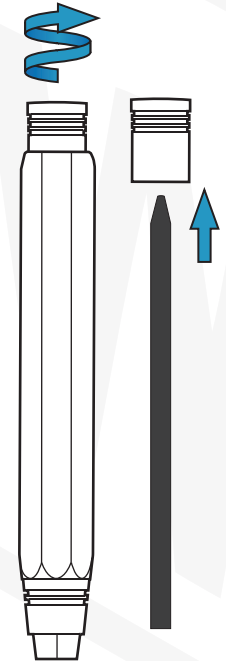

CONNECT EMR & TWIST PENCIL


CONNECT EMR

 - 1** Grab the tip with the metal tweezers.
- 2** Remove the old tip from the front part. Hold it tight with the tweezers.
- 3** Insert a new tip into the front part with the thinner side first.

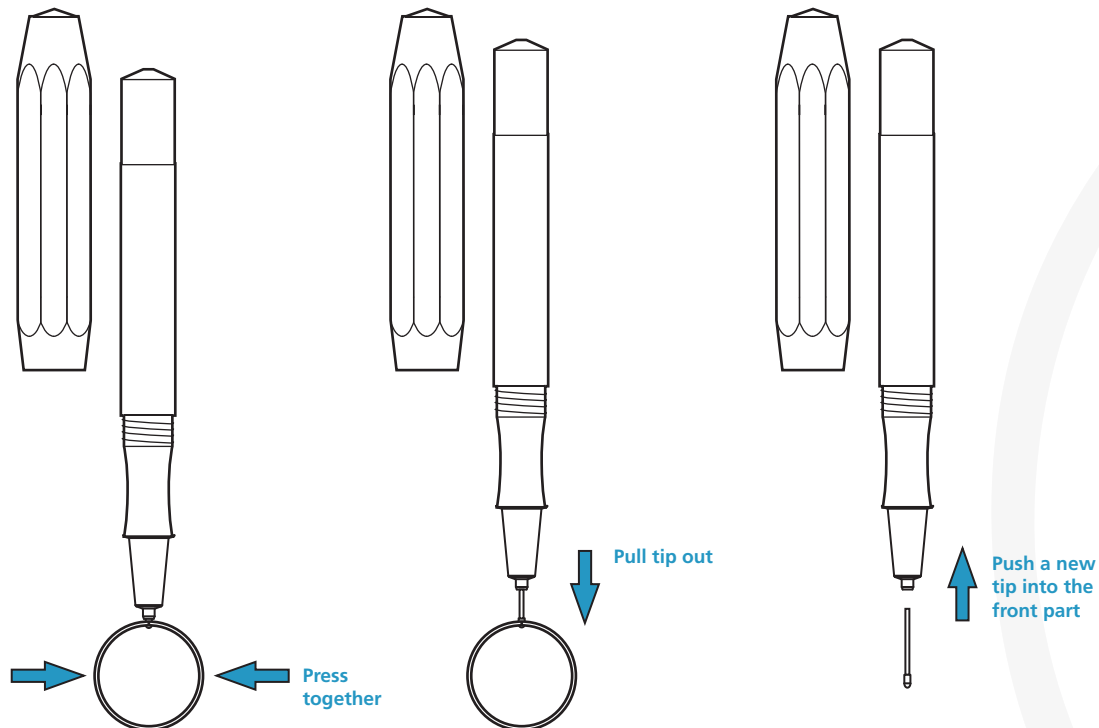


TWIST PENCIL

 - 1** Unscrew the cap.
- 2** Insert new lead.

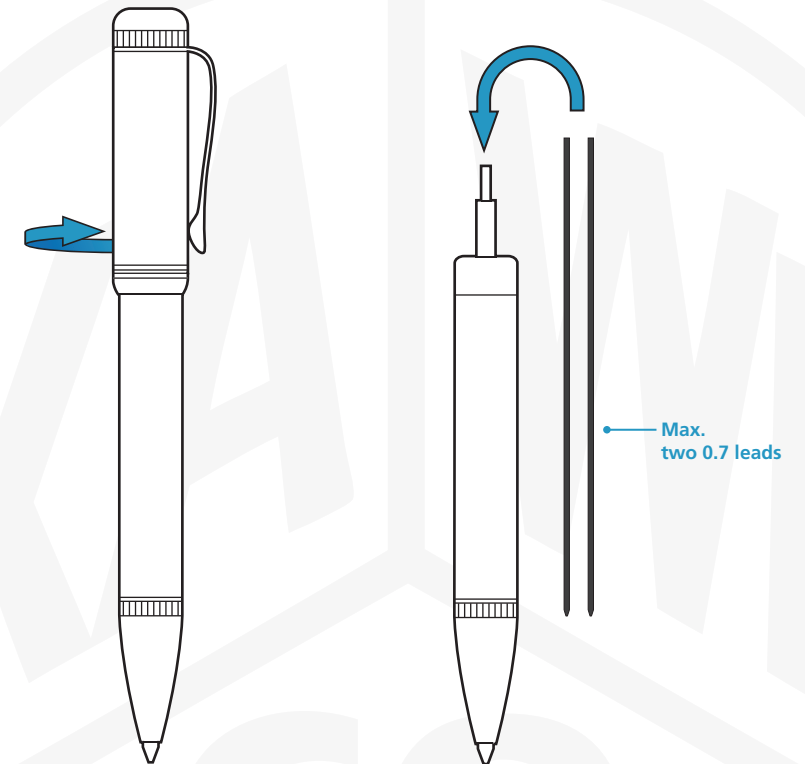


MINI CONVERTER (FOR SPORT)

 1 Screw the fountain pen open.

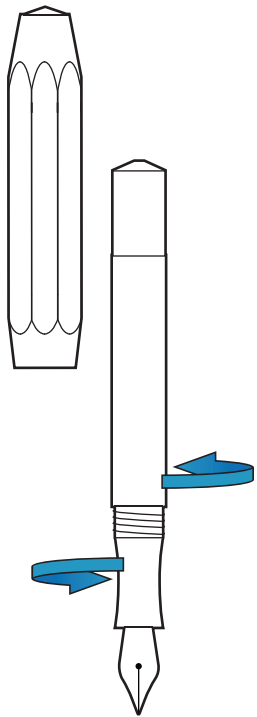


2 Insert the Kaweco Mini Converter.

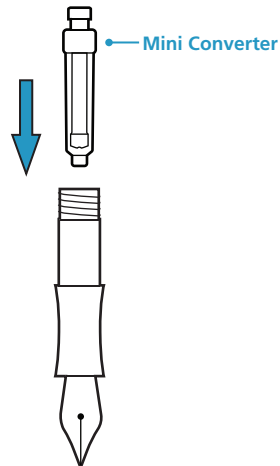 


3a Dip the entire nib and feed into the ink. Pull the knurled end of the Mini Converter. To fill while holding the lower part, keep the nib submerged.

 To clean the nib, please wipe it with a soft paper towel.

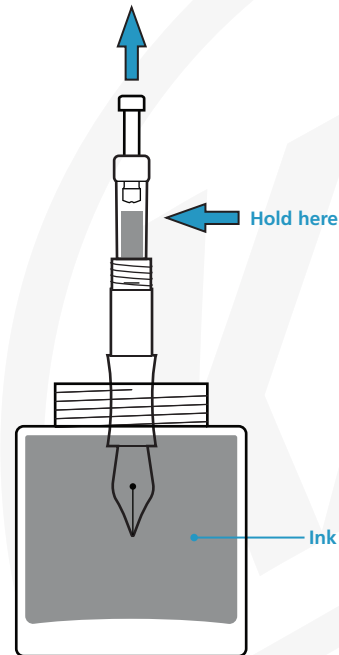


 3b To keep the front part of a transparent fountain pen clean, we recommend to fill the Mini Converter separately. Dip the front of the Mini Converter into the ink. Pull the knurled end upwards. Keep the front submerged while slowly filling the Converter with ink. Insert the Mini Converter into the transparent fountain pen.

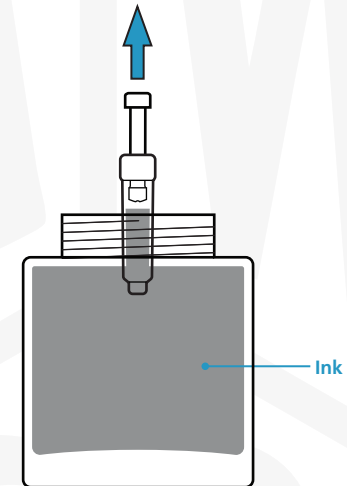


STANDARD CONVERTER

 1 Screw the fountain pen open.

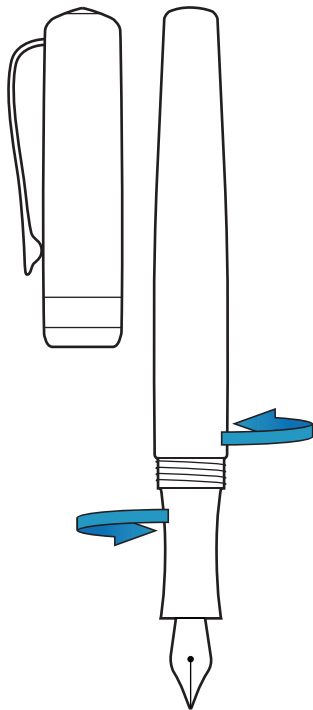


2 Insert the Kaweco Standard Converter.

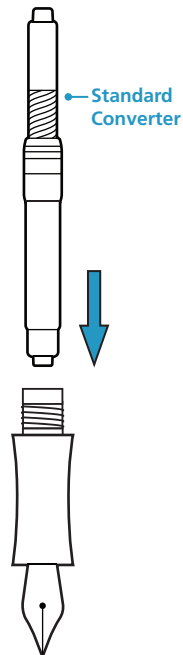 


3a Turn the upper part of the converter counterclockwise until the piston stops. Dip the entire nib and feed into the ink. Keep the nib submerged while turning the upper part clockwise to fill the converter with ink.

 To clean the nib, please wipe it with a soft paper towel.

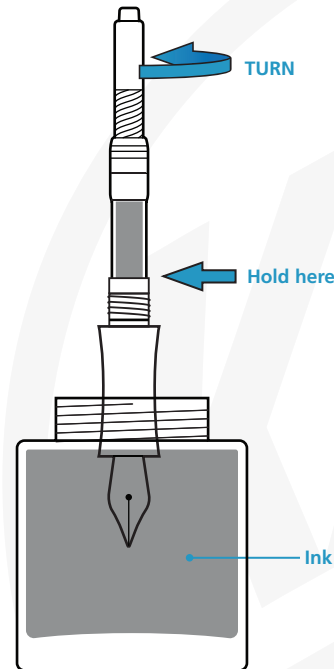


 3b To keep the front part of a transparent fountain pen clean, we recommend to fill the Standard Converter separately. Dip the front of the Standard Converter into the ink. Pull the upper part of the Converter clockwise. Keep the front submerged while slowly filling the Converter with ink. Insert the Standard Converter into the transparent fountain pen.

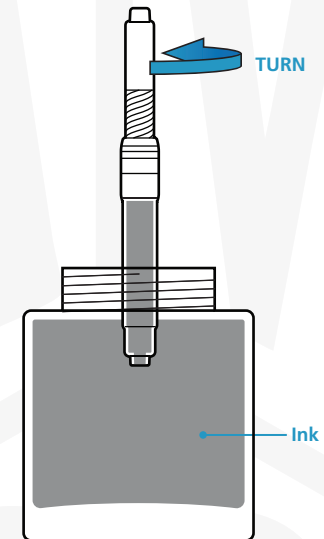

MAINTENANCE (RAW MATERIAL)

 ! Please note that the raw material for our metal writing instruments is untreated. The contact with oils, silicones and greases can lead to stains and other impurities, especially in the thread area. To reduce wear and tear of any sort, please keep sensitive parts of your writing instrument clean and dry.



raw material:

Sterling Sport
Steel Sport
Brass Sport
AL Sport
Liliput
Supra
Special Brass



Oils, silicon and grease may cause damage. Keep liquids away from sensitive parts, especially the thread.